



By CBDRY



DEODORIZING DRYER


I N S T R U C T I O N S

SETUP INSTRUCTIONS

1. REMOVE DRYER FROM THE BAG
2. TAKE OUT THE FAN AND FILTER
3. REMOVE THE FILTER FROM THE PACKAGING
4. OPEN THE MESH COVER ON THE TOP OF THE DRYER AND INSERT THE FILTER
5. PLACE THE FAN ON TOP OF THE FILTER **WITH THE STICKER FACING UP**
6. CLOSE THE MESH SCREEN
7. HANG THE DRYER
LEAVE A MINIMUM OF 12" (30CM) ABOVE THE FLOOR FOR PROPER AIR CIRCULATION

NOTE:

TO ENSURE YOUR DRYER OPERATES PROPERLY, ZIP ALL COMPARTMENTS COMPLETELY AFTER FILLING. SPREAD OUT THE MATERIAL TO BE DRIED IN EACH COMPARTMENT, LEAVING AMPLE ROOM FOR AIR FLOW. DO NOT OVER FILL OR STACK MATERIAL, AS THIS COULD IMPEDE THE DRYING PROCESS.

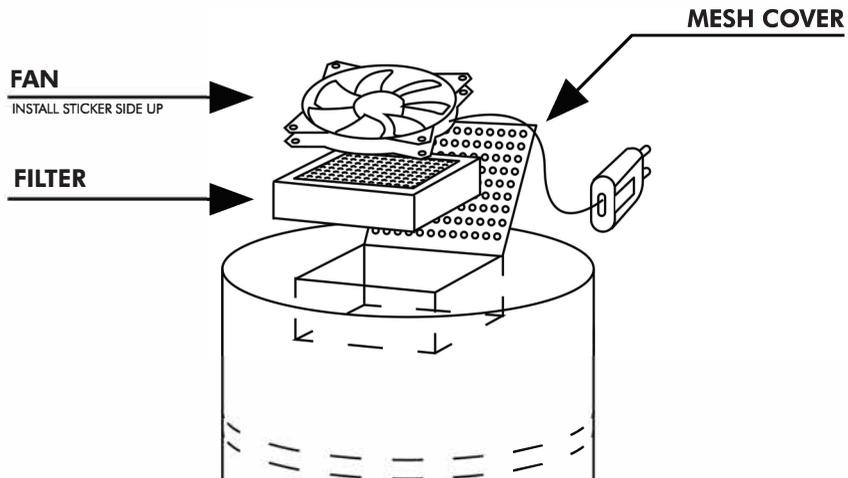

AIR FILTER REPLACEMENT

REFER TO DIAGRAM ON PREVIOUS PAGE

1. MAKE SURE THE FAN IS UNPLUGGED
2. OPEN THE MESH SCREEN ON THE TOP OF THE DRYER
3. REMOVE THE FAN
4. REMOVE THE OLD FILTER
5. REMOVE THE NEW FILTER FROM THE PACKAGING
6. INSERT THE NEW FILTER (DIRECTION DOES NOT MATTER)
7. PLACE FAN ON TOP OF THE FILTER WITH STICKER FACING UP
8. CLOSE THE MESH SCREEN

NOTE:

UNDER NORMAL OPERATING CONDITIONS, THE FILTER WILL LAST FOR APPROXIMATELY 3 MONTHS. TO INCREASE THE LIFESPAN OF YOUR FILTER, STORE IN AIRTIGHT CONTAINER WHEN NOT IN USE.



WARNING: Keep out of reach of children under 18 years old. For indoor use only. Use only in dry locations. Do not block the top grill of the device. Do not place near open flames or fire source. Unplug when cleaning or moving. Visit our website gorillagrowtent.com for a complete list of our terms and conditions. Thank you.

Power supply – 1.5A , 12V , 18W

Fan power - 12V , 0.2A



GORILLAGROWTENT.COM



EVERY



GORILLAGROWTENT.COM